


HITEK

IMPACTSHIELD **WINDOW PROTECTION FILM**

APPLICATION MANUAL

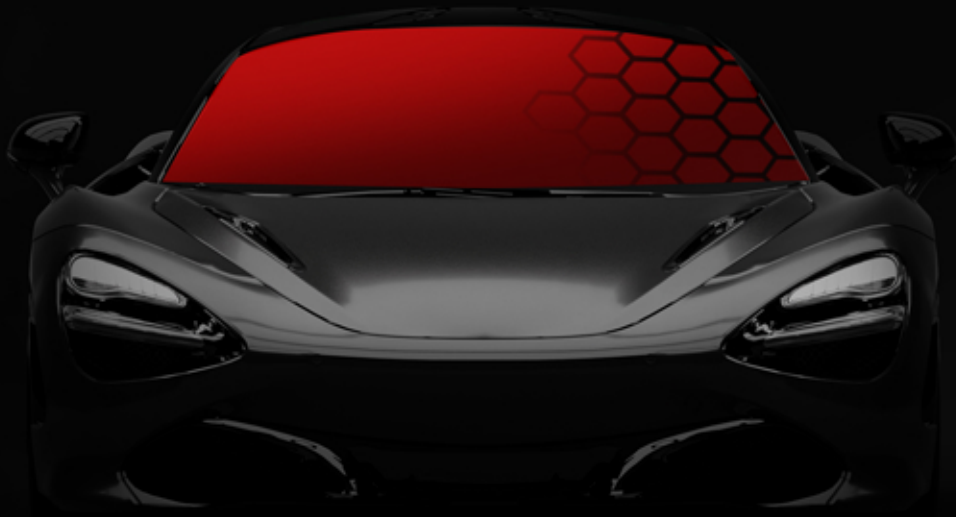

INSTALLATION GUIDE

RECOMMENDED TOOLS:

- | | | |
|------------------------------|----------------------------------|-----------------------------------|
| 1. Squeegee | 4. Spray Bottle 32 oz | 7. Coating application pad |
| 2. Cut/Trim Knife | 5. Installation Solution* | 8. Steamer and heat gun |
| 3. Synthetic clay bar | 6. Clean microfiber towel | |

***Installation Solution:** Fill a 32 oz spray bottle with distilled water, Add 2-4 drops of Johnson's Baby Shampoo. The soap to water ratio may be adjusted based on climate conditions and installer preference.

1 Thoroughly clean the windshield using a synthetic clay bar, and clean the wiper blades.



2 Pre-cut a piece of WPF. Leave extra length and width to grab for positioning.



3 With the adhesive side facing the glass, remove the top liner.



4 Remove the oversized WPF, and re-clean the windshield.



5 With the adhesive side facing up, remove the release liner.




6 Spray the solution on both the windshield, and adhesive side of the WPF.



7 Place the adhesive side on the windshield, adjust its position, and spray solution over the top of the WPF.



8 Gently squeegee the WPF to secure the film to the glass, then carefully trim for a perfect fit.

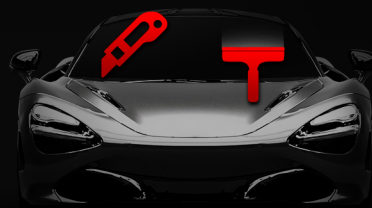

WPF = Windshield Protection Film
Installation by a certified installer helps ensure the best results.

MAINTENANCE CARE

1 APPLY WPF COATING TO THE APPLICATION PAD.



2 APPLY THE WPF COATING EVENLY



WPF PRE-INSPECTION, HANDLING & INSTALLATION GUIDELINES.

1. Inspect the windshield for damage or scratches and notify the customer of any findings.
2. Thoroughly clean the windshield to remove all dirt, dust, and oils.
3. Avoid excessive squeegee pressure, which can cause marks or surface distortion.
4. WPF is flexible; heat shrinking with a heat gun is not required.
5. A steamer may be used to aid uniform application, especially on curved glass.
6. WPF is intended for installation on glass windshields only.
7. After use, securely tape the film roll to prevent tunneling.
8. Do not leave WPF rolls on the floor for extended periods, as deformation may occur.

WPF COATING PRECAUTIONS & APPLICATION GUIDELINES.

1. Use approximately 3ml of WPF coating per application.
2. Divide the WPF into three sections: left, center, and right.
3. Apply the WPF coating to one section using an application pad.
 - Wipe it off with a clean microfiber towel.
 - Repeat the process for the remaining sections.
 - Complete the entire application and wipe-down within 2 minutes.
4. If hardening occurs during application:
 - Remove it with a compound or IPA.
 - Reapply the WPF coating.
5. Full curing takes approximately 3 days in summer and up to 1 week in winter.
6. For 3 days after WPF coating application:

AFTER INSTALLATION CARE:

1. Avoid direct high-pressure washing, as it may lift or damage the film.
2. Standard wipers may cause jumping or chattering; silicone wipers are strongly recommended for best performance.
3. Do not use strong acidic or alkaline car wash products, as they may damage the film.
4. Never operate the wipers on a dry or dusty windshield. Always spray water before use.
5. Apply a WPF coating every 2–3 months to maintain and enhance film performance.
6. Minor surface scratches may be repairable; deep scratches cannot be restored.
7. Remove snow or ice from the windshield before using the wipers.
8. For heavy contamination, clean the windshield surface thoroughly before use.